



SANI-MATIC

TactiCab™: Economical, Automated Cleaning with Repeatable Results.



The Sani-Matic TactiCab is a compact, easy-to-install automatic washer that improves cleaning process productivity by reducing cycle time and labor.



The **Sani-Matic TactiCab** is an ideal solution for food processing manufacturers with space constraints that are looking to replace manual cleaning with a repeatable, controlled cleaning process.

Advantages

- **Complete Clean.** TactiCab's rotary bars maximize cleaning efficiency with an even distribution of cleaning solutions.
- **Repeatable Results.** The easy-to-operate system replaces inconsistent manual cleaning with a repeatable, controlled cleaning process.
- **Easy Installation, Space-Saving Design.** The system's compact size and construction make it easy to install and accommodate facilities with restricted space.
- **Easy-to-Implement Control Program.** Sani-Matic's non-proprietary PLC program is easy to operate and maintain.
- **Safety.** Minimizes worker exposure to high temperatures and strong concentrations. System's racks are easy to load and unload.
- **Water, Chemical, Utility & Labor Savings.** The automated system reduces labor and utility costs, as well as chemical and water use.

Applications

Knives



Buckets & Trays



Scoops



Features

Standard

Dimensions/Weight	Area (closed) - 55.375" W x 37.5" D • Area (open) - 55.375" W x 65.375" D • 1,000 lbs
Construction	All wetted parts are constructed of 304 stainless steel
Cabinet	Dual-wall construction with air-gap for insulation
Door	Durable, spring-assist hinged door with automatic shutdown, if opened
Spray Technology	Hydraulic, rotating spray bars with stainless steel nozzles for complete coverage
Strainer	Dual removable strainer elements with access for easy cleaning
Heater	Electric immersion heater to boost and maintain temperature
Pump	Stainless steel, 3 hp centrifugal supply pump provides 80 gpm @ 27 psi
Electrical	Motor starter/disconnect in cabinet-mounted enclosure with NEMA 4X rating
Drain	Stainless steel, 0.5 hp pump provides 29 gpm @ 8.7 psi to evacuate sump
Controls	PLC controls maintain an easy-to-use operator interface
Programs	System has 10 available wash programs: 3 pre-programmed cycles — short, medium and long — and 7 customizable
Chemicals	Automatic chemical dosing from integrated 5-gallon containers
Safety	Automatic water level controls with alarm and shutdown
Racks	Knife or basket rack
Reservoir	8-gallon sump


Find Cleaning Confidence and Savings

The TactiCab's automated wash cycles create significant efficiencies and savings over manual and Clean-Out-of-Place (COP) cleaning by reducing water, chemicals, labor and wash cycle time.

Sani-Matic's TactiCab standard or custom racks provide further efficiencies by optimizing load capacity and accommodating item diversity.



The TactiCab trolley allows operators to safely load and transport the racks

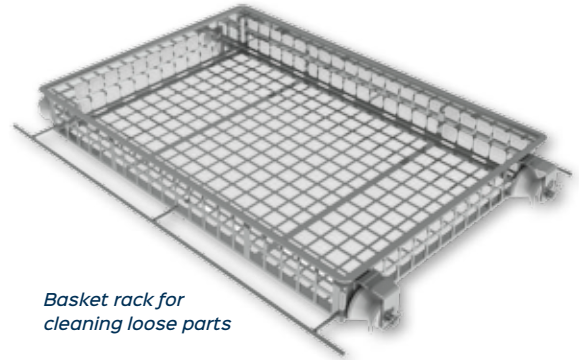

Basket rack for cleaning loose parts



Knife rack for cleaning knives

Optional

- Automatic sanitizer injection system
- Custom-designed portable transfer racks
- Additional water supply valve
- Sani-Matic Start-up Services

Operating Requirements

Electrical Power	30 amps @ 460 VAC, 3-phase, 60 Hz
Inlet Connection	¾" NPT-M, 15 gpm @ 15 psi
Drain Connection	1½" NPT-M



We mix our industry-specific expertise with the perfect combination of Time, Action, Chemical and Temperature to deliver the best solution for your cleaning challenge.

Cleaning Confidence.

Repeatable results you can count on every time you clean your process parts and equipment.
That's Cleaning Confidence from Sani-Matic.



SANI-MATIC

sanimatic.com

